

Removing Rear Wheel Penza Shaft Drive

1. Remove axle bolt & remove kick stand and washer. Tool: Wrench

2. Loosen gearing nut to release rear shifter. Tool: Allen key

3. Remove axle bolt on shaft side. Tool: Wrench

4. Remove tire.

